OUNEVA
OUNEVA GROUP

INSTALLATION GUIDE

6.4.2021

Product data

Product code	Product name				
VC02-0071	3pcs Al4x50/Cu4x35 + 1 pce Al6x50/Cu6x35 with conductors				
VC02-0069	3pcs Al4x50/Cu4x35 + 1 pce Al6x50/Cu6x35 with fuse base and 10 A fuse				
VC02-0114	5pcs Al4x50/Cu4x35 with fuse base and 10 A fuse				
VC02-0093	3pcs Al4x50/Cu4x35 + 1 pce Al6x50/Cu6x35 with fuse base, 10 A fuse and phase markings				
VC02-0085	3pcs Al4x50/Cu4x35 + 1 pce Al6x50/Cu6x35 with fuse base and 6 A fuse				
VC02-0115	5pcs Al4x50/Cu4x35 with fuse base and 6 A fuse				
VC02-0092	3pcs Al4x50/Cu4x35 + 1 pce Al6x50/Cu6x35 with fuse base, 6 A fuse and phase markings				

Installation





Attach fuse holder base (max. Ø 6 mm screw)

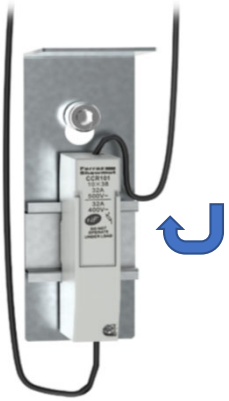

Set fuse holder on DIN rail

Turn conductor under in order to prevent water condensation

CE RoHS

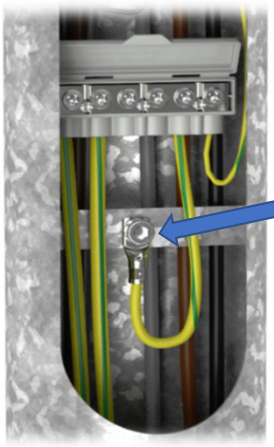

Attach earthing cable with cable shoe to its place (max. Ø 6 mm screw)



Connectors should be installed with conductor inputs downwards



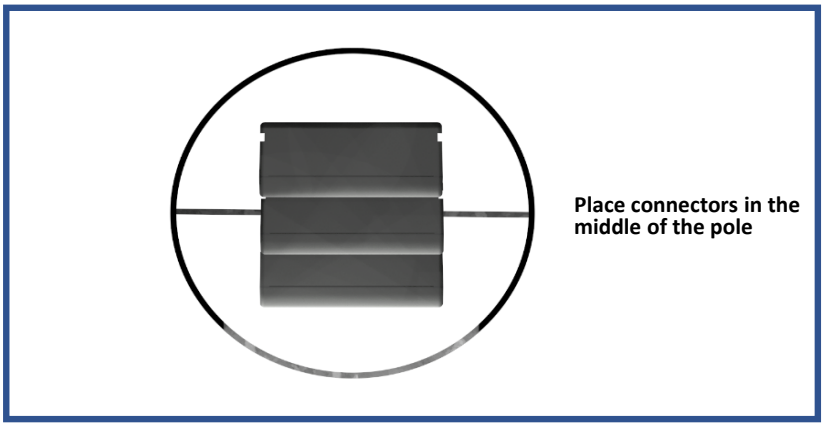

Place connectors in the middle of the pole

Ouneva Oy
Teollisuustie 21
FI-82730 Tuupovaara, Finland
Tel. +358 400 179 750
info@ouneva.fi
www.ounevagroup.fi
www.ounevaproducts.fi