


DSZ15WD-3x5A MID

MID

CT operated three-phase energy meter with settable CT ratio and MID. MID-compliant and therefore approved for use for billing purposes. Maximum current 3x5 A. Standby loss 0.5 watt per path only.

Modular device for DIN-EN 60715 TH35 rail mounting.
4 modules = 70 mm wide and 58 mm deep.
Accuracy class B (1%). With S0 interface.
This three-phase energy meter measures active energy by means of the current between input and output. The internal power consumption of 0.5 watt active power per path is neither metered nor indicated.
1, 2 or 3 phase conductors with max. currents up to 5 A can be connected.
The inrush current is 10 mA.
The N terminal must always be connected.
The 7 segment LC display is also legible twice within a period of 2 weeks without power supply.
Power consumption is shown by a bar flashing at a rate of 10 times per kWh.
On the right next to the display are the keys MODE and SELECT. Press them to scroll through the menu according to the operation manual. First the **background lighting** switches on. The display then shows the total active energy, the active energy per resettable memory, and the instantaneous values of consumption, voltage and current per phase.
The CT ratio can also be set. It is set to 5:5 at the factory and blocked with a bridge over the terminals which are marked with 'JUMPER'. To adjust the CT ratio to the installed transformer remove the bridge and reset the energy meter according to the operation manual. Then block it again with the bridge. Adjustable current transformer ratios: 5:5, 50:5, 100:5, 150:5, 200:5, 250:5, 300:5, 400:5, 500:5, 600:5, 750:5, 1000:5, 1250:5 and 1500:5.
Error message (false)
When the phase conductor is missing or the current direction is wrong 'false' and the corresponding phase conductor are indicated on the display.
Important! Before working on the current transformers disconnect the voltage paths of the energy meters.

Typical connection
4-wire-connection 3x230/400 V

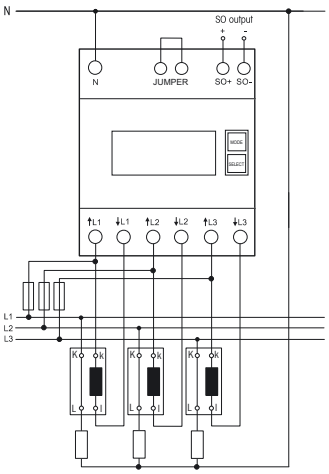

Manuals and documents in further languages:
https://eltako.com/redirect/DSZ15WD-3*5A_MID

Technical data page 10-34.

DSZ15WD-3x5A MID	CT operated three-phase energy meter, MID approval	**Art. No. 28305015**	

Recommended retail prices excluding VAT.

TECHNICAL DATA SINGLE-PHASE AND THREE-PHASE ENERGY METERS AND ENERGY CONSUMPTION INDICATOR

	EVA12-32A **WSZ14DRS-32A** MID **WSZ14DRSE-32A** **WSZ15D-32A** MID **WSZ15DE-32A** **WZR12-32A** **WSZ155** MID	**WSZ15D-65A** MID	**DSZ15D-3x80A** MID **DSZ15DE-3x80A** **DSZ15DM-3x80A** MID **DSZ15DZ-3x80A** MID **DSZ15DZE-3x80A** **DSZ15DZMOD-3x80A** MID **DSZ14DRS-3x80A** MID **DSZ14DRSZ-3x80A** MID **DSZ180CEE** MID	**DSZ15WD-3x5A** MID **DSZ15WDM-3x5A** MID **DSZ14WDRS-3x5A** MID
Rated voltage Extended range	230 V, 50 Hz -20%/+15%	230 V, 50 Hz -20%/+15%	3x230/400 V, 50 Hz -20%/+15%	3x230/400 V, 50 Hz -20%/+15%
Reference current I_{ref} (Limiting current I_{max})	5(32) A WSZ155: Rated current 16 A	10(65) A	3x10(80) A DSZ180CEE-32A: Rated current 32A DSZ180CEE-16A: Rated current 16A	3x5(6) A
Internal consumption active power	0.4 W EVA12, WZR12: 0.5 W	0.4 W	0.5 W per path DSZ14DRS: 0.8 W at L1	0.5 W per path DSZ14WDRS: 0.8 W at L1
Display	LC display 7 digits, therefrom 1 or 2 digits after the decimal point	LC display 7 digits, therefrom 1 or 2 digits after the decimal point	LC display 7 digits, therefrom 1 or 2 digits after the decimal point	LC display 7 digits, therefrom 1 digit after the decimal point
Display instantaneous values	WSZ15D: With a key you can select active power, voltage and current WSZ15DE, WSZ155: Active power displayed for 5 seconds every 30 seconds EVA12, WZR12: active power	With a key you can select active power, voltage and current	With a key you can select total active energy and active energy resettable, power, voltage and current per phase tariff 1 and tariff 2 (not DSZ180)	With a key you can select total active energy and active energy resettable, power, voltage and current per phase
Accuracy class ±1%	B	B	B	B
Inrush current according to accuracy class B	20 mA	40 mA	40 mA	10 mA
Operating temperature	-40/+70°C EVA12, WZR12: -10/+55°C	-40/+70°C	-40/+70°C	-40/+70°C
Interface (not DSZ180, EVA12, WZR12, WSZ155)	DSZ15DM and DSZ15WDM with M-Bus interface. DSZ15DZMOD with Modbus interface. DSZ14DRS, DSZ14DRSZ, DSZ14WDRS, WSZ14DRS and WSZ14DRSE with interface for the ELTAKO RS485 bus. Otherwise pulse output S0 according to DIN EN 62053-31, potential-free through an optocoupler, max. 30 V DC/20 mA and min. 5 V DC. Impedance 100 ohms.			
	Pulse length 30 ms	Pulse length 30 ms	Pulse length 30 ms	Pulse length 30 ms
	2000 Imp./kWh	2000 Imp./kWh	1000 Imp./kWh	10 Imp./kWh
Terminal cover sealable			Terminal cover claps (not DSZ180)	Terminal cover claps
Protection degree	IP50 for mounting in distribution cabines with protection class IP51 WSZ155: housing: IP68, plug/coupling: IP44 (WSZ155FBSS IP54), PRCD IP66		IP50 for mounting in distribution cabines with protection class IP51 DSZ180: housing: IP68, plug/coupling: IP44	
Maximum conductor cross section	6 mm^2 WSZ15D, WSZ15DE: L terminals 16 mm^2 (not WSZ155)	L terminals 16 mm^2, N and S0 terminals 6 mm^2	N and L terminals 16 mm^2, S0, M-Bus, Modbus and RS485 bus terminals 6 mm^2 DSZ15D/DE/DM/DZ/DZE/DZMOD-3x80A, DSZ14DRS/DRSZ-3x80A: L terminals 25 mm^2 (not DSZ180)	

The N terminal of three-phase energy meters must be connected, if not the electronics might be destroyed.

According to DIN VDE 0100-443 and DIN VDE 0100-534, the installation of a surge arrester (SPD) is mandatory.
ELTAKO offers suitable, standard-compliant surge arresters of types 1, 2, and 3 – see Chapter 8, "Surge Arresters."

Compliance with: EN 50470