


Cartridge units made of stainless steel, quadrangular Assembly instruction




				 	 	 				_	_	+	_	-	 	_		 		 			 		
												-													
							-					+								-					
												+													
												1													
																				_					
												_		_											
		_	_							_			_	_					_						
	_	_	_					_		_			_	_					_	 _	<u> </u>		_		
	_	_	_					_		_		+	_	-									_		
												+	_	-		_				 					-
		+	\rightarrow				_	\rightarrow		-		+	+	+			_	 	-		-				\neg
												+													
	\neg											+								1					
												+								1					
												_		_											
												_													
												_													
												_		_											 _
												-		-			_	 							
																	_							-	
	\neg		\neg					\neg				+		+					+				\neg	+	
			+											+									+		
			_					_																	
	_	_	_					_		_	_			_	_				_				 	_	
												_	_							 					
		_	_					_		_		_		_	_				_				 	_	-
<u> </u>	_	_	_							-		+	_	+	 _				-	 _			 _	-	 _
	\rightarrow	\rightarrow	-					-		-		+		+					+		-		 \rightarrow	-	
	\rightarrow	-																					\rightarrow		
-	\neg	\neg						\neg		-				+					+		-		\neg	-	-
	\neg													+					+				\neg	+	
												+													


Cartridge unit made of stainless steel, quadrangular Assembly instruction

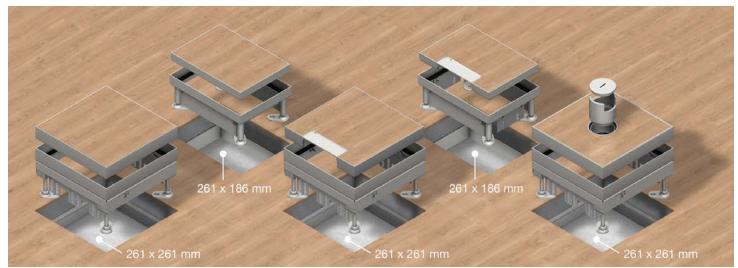

Quadrangular cartridge unit with hem, made of stainless steel, as a dummy cartridge unit, cable outlet cartridge unit and tube cartridge unit for the installation into screed and hollow floors. For 12/22/32/42 mm parquet and stone covers and linoleum in combination with rigid foam lid insert. Can be levelled from 65 to 315 mm.

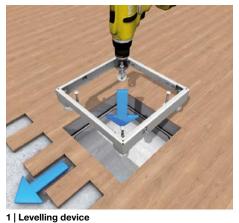

For parquet or stone floors insert the levelling device into the floor opening. Fasten the four levelling bases with nail plugs.

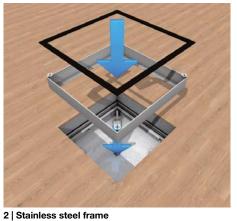


Screw the stainless steel frame to the levelling device with four screws. Glue rubber seal in place. Make the grounding connection between levelling device and floor box. A regular maintenance and cleaning of the seals is


necessary.




3 | Floor adjustment Align the installation frame flush to the level of the finished floor with the four levelling screws. Seal the expansion joint all around with a suitable sealing compound.

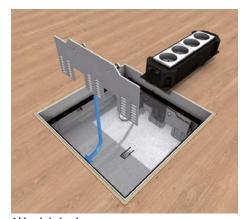

4 | Lock-in leads Mount both lock-in leads with two screws each on the side of the frame. Create grounding connection between levelling device and floor box. When using a coupler plug H = 35 mm, comply with the minimum installation depth Hmin = 95 mm.

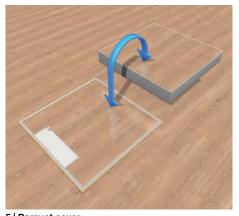

5 | **Parquet cover** For damp maintenance floors such as parquet covers, use a dummy cartridge unit or a cable outlet cartridge unit. However, the floor cover depth must be considered. Insert the replaceable cartridge into the frame. Observe the potential equalization.

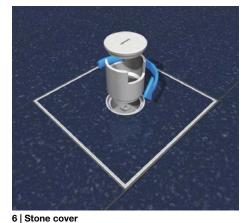

For wet maintenance floor covers such as stone covers, only a tube cartridge unit may be used. However, the floor cover depth must be considered. Insert the replaceable cartridge into the frame. The tube can be screwed. Observe the potential equalization.



Errors and technical modification subject to change, reproduction as well as electronic duplication only with our written permission. With appearance of this print all preceding documents lose their validity.



© PUK Group | PUK-MA UFS-UEKD-V-E EN | 160416 | 4.v. | 210310

www.puk.com